



Installation and Maintenance Manual

Electro-Pneumatic Regulator

Series ITV10**-X153, ITV20**-X153

(Manifold Type)



1 Safety Instructions

This manual contains essential information for the protection of users and others from possible injury and/or equipment damage.

- Read this manual before using the product, to ensure correct handling, and read the manuals of related apparatus before use.
- Keep this manual in a safe place for future reference.
- These instructions indicate the level of potential hazard by label of "Caution", "Warning" or "Danger", followed by important safety information which must be carefully followed.
- To ensure safety of personnel and equipment the safety instructions in this manual and the product catalogue must be observed, along with other relevant safety practices.

| | |
|----------------|--|
| Caution | Indicates a hazard with a low level of risk, which if not avoided, could result in minor or moderate injury. |
| Warning | Indicates a hazard with a medium level of risk, which if not avoided, could result in death or serious injury. |
| Danger | Indicates a hazard with a high level of risk, which if not avoided, will result in death or serious injury. |

- Electromagnetic compatibility:
This product is class A equipment intended for use in an industrial environment. There may be potential difficulties in ensuring electromagnetic compatibility in other environments due to conducted as well as radiated disturbances.

Warning

- **The compatibility of pneumatic equipment is the responsibility of the person who designs the pneumatic system or decides its specifications.**
Since the products specified here can be used in various operating conditions, their compatibility with the specific pneumatic system must be based on specifications or after analysis and/or tests to meet specific requirements.
- **Only trained personnel should operate pneumatically operated machinery and equipment.**
Compressed air can be dangerous if an operator is unfamiliar with it. Assembly, handling or repair of pneumatic systems should be performed by trained and experienced personnel.
- **Do not service machinery/equipment or attempt to remove components until safety is confirmed.**
- Inspection and maintenance of machinery/equipment should only be performed after confirmation of safe locked-out control positions.
- When equipment is to be removed, confirm the safety process as mentioned above. Switch off air and electrical supplies and exhaust all residual compressed air in the system.
- Before machinery/equipment is re-started, ensure all safety measures to prevent sudden movement of cylinders etc. (Supply air into the system gradually to create back pressure, i.e. incorporate a soft-start valve).
- **Do not use this product outside of the specifications. Contact SMC if it is to be used in any of the following conditions:**
 - Conditions and environments beyond the given specifications, or if the product is to be used outdoors.
 - Installations in conjunction with atomic energy, railway, air navigation, vehicles, medical equipment, food and beverage, recreation equipment, emergency stop circuits, press applications, or safety equipment.
 - An application, which has the possibility of having negative effects on people, property, or animals, requiring special safety analysis.

Caution

- Ensure that the air supply system is filtered to 5 microns.

2 Specifications

| Model | ITV1(2)01*-X153 | ITV1(2)03*-X153 | ITV1(2)05*-X153 |
|--------------------------------|--|--|-----------------|
| Min. supply pressure | (Set pressure) + 0.1 MPa | | |
| Max. supply pressure | 0.2 MPa | 1.0 MPa | |
| Set pressure range | 0.005 ~ 0.1 MPa | 0.005 ~ 0.5 MPa | 0.005 ~ 0.9 MPa |
| Supply voltage | 24 VDC±10%, 12 to 15 VDC | | |
| Current consumption | 24 VDC | Max. 120 mA | |
| | 12 VDC | Max. 180 mA | |
| Input signal | Current type ^{Note1} | 4-20 mADC, 0-20 mADC | |
| | Voltage type | 0-5 VDC, 0-10 VDC | |
| | Preset input type | Max. 4 steps | |
| Input impedance | Current type | Max. 250 Ω ^{Note4} | |
| | Voltage type | Approx. 6.5 kΩ | |
| | Preset input type | Approx. 2.7 kΩ | |
| Output signal ^{Note2} | Analogue | 1-5 VDC (Load Impedance: 1kΩ or more) | |
| | Switch | NPN - Open collector type: 30 V 30 mA PNP - Open collector type: 30 mA | |
| Linearity | Max. ±1%F.S. | | |
| Hysteresis | Max. 0.5%F.S. | | |
| Repeatability | Max. ±0.5%F.S. | | |
| Sensitivity | Max. 0.2%F.S. | | |
| Temperature characteristics | Max. ±0.12%F.S./°C | | |
| Operating temperature | 0~50°C (without condensation) | | |
| Pressure display | Accuracy | ±3%F.S | |
| | Min. Unit | MPa: 0.01, kgf/cm ² : 0.01, bar: 0.01, PSI: 0.1 ^{Note3} , kPa: 1 | |
| Protection structure | Main unit: IP65, Cable connector: IP67 | | |

Note 1: Two wire control, 4 to 20 mADC and 0 to 20 mADC are not available. Supply voltage of 12-15VDC or 24 VDC is required.
 Note 2: Make selection of analogue or switch output; also select NPN or PNP output when switch output is selected.
 Note 3: 1 PSI is the minimum unit on ITV*05*.
 Note 4: Value for the state with no over current included. If an allowance is provided for an over current circuit, the input impedance varies depending on the input current. This is 350 Ω or less for an input current of 20 mA DC.

3 Operation Principle

When the input signal increases the supply solenoid valve ① turns on and the exhaust solenoid valve ② turns off. Supply pressure is passed to the pilot valve ③ through the supply solenoid valve. The pilot valve will open the main valve allowing partial supply pressure to pass to the out port. The pressure sensor ④ will provide output pressure feedback to the control circuit ⑤. The control circuit will balance the input signal and output pressure to ensure that the output pressure remains proportional to the input signal.

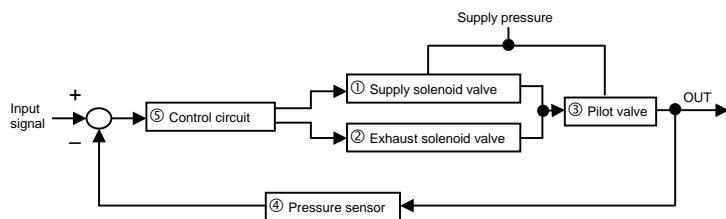


Fig. 1 - Control diagram

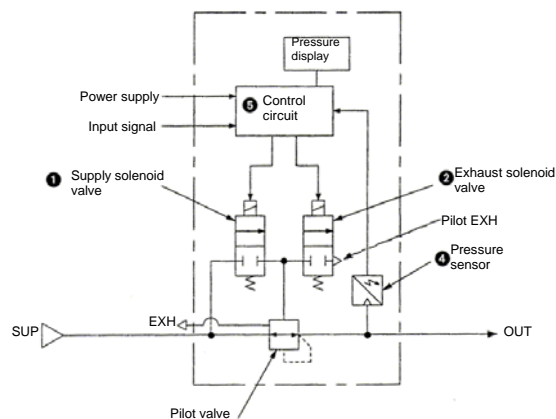


Fig. 2 - Schematic diagram

4 Wiring

Caution

Connect the cable to the connector on the main unit as shown in the following diagrams. Take precautions, as incorrect wiring will damage the unit. Use a DC power supply capable of supplying the necessary power requirements with minimal ripple.

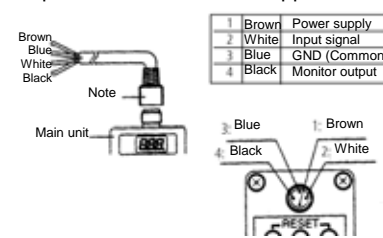


Fig. 3 - Connection details
 Note: The right angle type connector extends to the left side (over the supply port side)

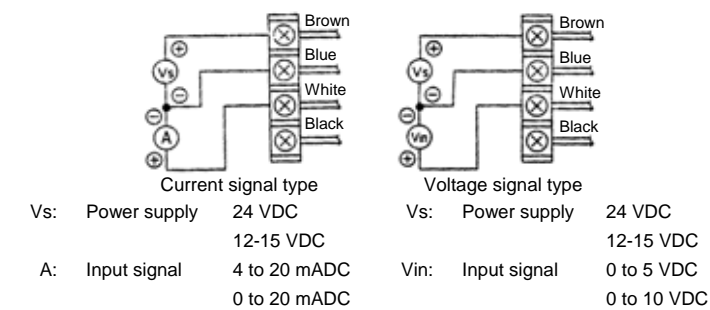


Fig. 4 - Wiring diagrams

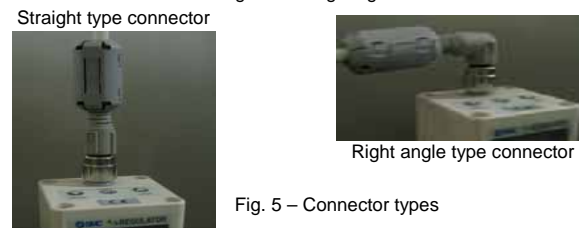


Fig. 5 - Connector types

5 Setting the Regulator

Caution

When the 'set' key is operated minimum/maximum pressure will be present at the outlet port. When primary pressure is applied to the regulator minimum pressure will be present at the outlet port.



Fig. 6 - Key features of the ITV.

- Release 'Key Lock' as explained in section 'Function of Key-Lock'
 - After releasing key lock, SET needs to be pressed again to get to F-1
 - To set minimum pressure (display shows F-1) use up/down keys and press 'Set' key to 'Lock' setting.
 - To set maximum pressure (display shows F-2) use up/down keys and press 'Set' key to 'Lock' setting.
- Note 1: If the above sequence has been followed correctly, the settings will complete automatically.
 Note 2: If only setting minimum pressure, when pressure is 'Set', pressing the set button once more will 'skip' to the next step..

6 Function of Key-Lock

The keys are locked after connecting power and cannot be operated. 'Loc' is displayed when any keys are pushed.

- Key-Lock Release
- Push 'Down' key for longer than 2 seconds.
- Display will flash 'Loc' (locked).
- Push 'Set' key to unlock.
- Note: To cancel push 'Up' key.
- Key-Lock Push 'Up' key for longer than 2 seconds.
- Display will flash 'unL' (unlocked).
- Push 'Set' key to lock.
- Note: To cancel push 'Down' key.

7 Function of the 'Error' Display

If an abnormality is detected by the ITV the LED display will show 'Er' followed by a code number. Isolate the power supply and ascertain the problem and solve. Re-instate power supply after correcting fault. Error codes are as shown in the table below.

| No | Content | Display |
|----|---------------------------------------|---------|
| 1 | Input signal is outside specification | Er 1 |
| 2 | EEProm read/write error | Er 2 |
| 3 | Memory read/write error | Er 3 |
| 4 | Solenoid valve fault | Er 4 |
| 5 | Switch output over-current | Er 5 |

8 Reset Function

- Push 'Up' and 'Down' keys (Fig 6) together for longer than 3 seconds.
- Display shows 'RES'.
- Release keys to reset minimum pressure and maximum pressure.

9 Installation & Maintenance

Caution

- If the electrical supply fails, settings are 'held' for a short period.
- If the air pressure fails with power 'on' the solenoid will 'flutter'. Turn off the power.
- If the monitor output function is not used, ensure that the wire is totally insulated.
- This product is pre-set at the factory and must not be dismantled by the user. Contact your local SMC office for advice.
- Ensure, when installing this product, that it is kept clear of power lines to avoid noise interference.
- Ensure that load surge protection is fitted when inductive loads are present (i.e. solenoid, relay etc.).
- Ensure precautions are in place if the product is used in a 'free flow output' condition. Air will continue to flow continuously.
- Do not use a lubricator on the input side of this product. If lubrication is necessary, place the lubricator on the 'output' side.
- Ensure all air is exhausted from the product before maintenance.
- Length of connector cable shall be 10 m maximum.

10 Contacts

| | | | |
|------------|-------------------|----------------|-------------------|
| AUSTRIA | (43) 2262 62280 | NETHERLANDS | (31) 20 531 8888 |
| BELGIUM | (32) 3 355 1464 | NORWAY | (47) 67 12 90 20 |
| CZECH REP. | (420) 541 424 611 | POLAND | (48) 22 211 9600 |
| DENMARK | (45) 7025 2900 | PORTUGAL | (351) 21 471 1880 |
| FINLAND | (358) 207 513513 | SLOVAKIA | (421) 2 444 56725 |
| FRANCE | (33) 1 6476 1000 | SLOVENIA | (386) 73 885 412 |
| GERMANY | (49) 6103 4020 | SPAIN | (34) 945 184 100 |
| GREECE | (30) 210 271 7265 | SWEDEN | (46) 8 603 1200 |
| HUNGARY | (36) 23 511 390 | SWITZERLAND | (41) 52 396 3131 |
| IRELAND | (353) 1 403 9000 | UNITED KINGDOM | (44) 1908 563888 |
| ITALY | (39) 02 92711 | | |

SMC Corporation

URL : <http://www.smcworld.com> (Global) <http://www.smceu.com> (Europe)
 Specifications are subject to change without prior notice from the manufacturer.
 © 2009 SMC Corporation All Rights Reserved.